


URSA MINOR-Airlines-Joystick R



User Manual V1.0 2024.08

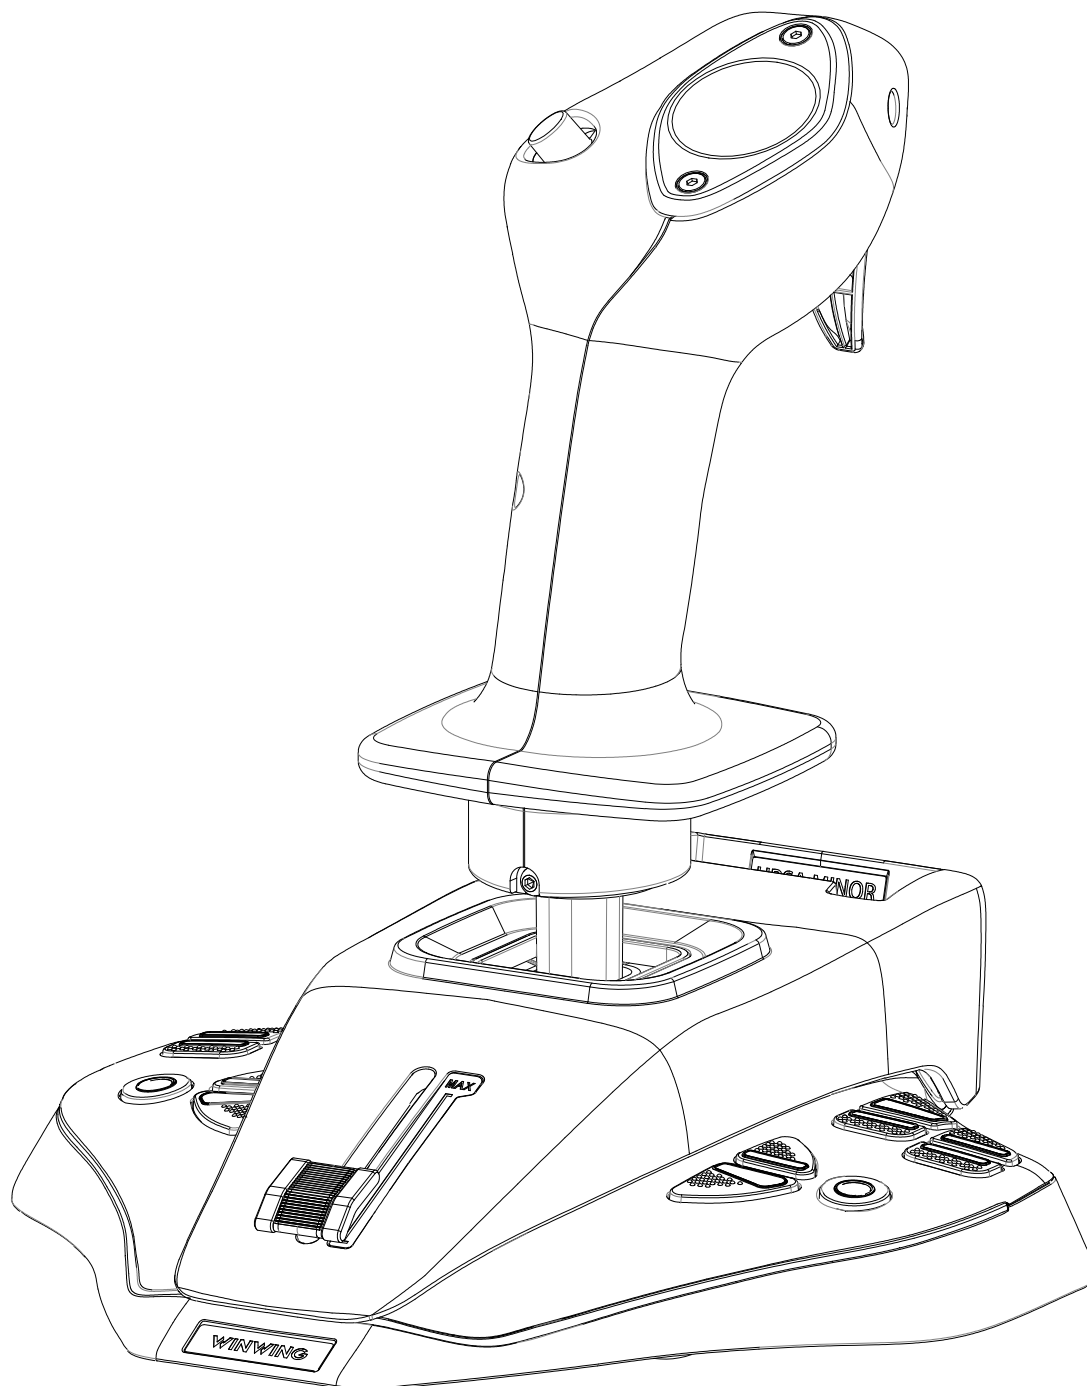

Catalog

Packing List	1
1 Parameters	2
1.1 Performance Parameter	2
1.2 Applicable Models	4
1.3 Dimensions	5
1.4 Installation Dimensions	6
2 Functions	7
2.1 Buttons and Functions	7
2.2 Adjustment Methods	10
3 Components Assembly and Disassembly	12
4 Installation of Connectors	12
5 Installation Methods	12
5.1 Desktop Mounting	12
5.2 Game Seat Mounting	14
5.3 Cascading	14
6 Calibration	15
6.1 X and Y Axes Joystick Calibration	15
6.2 Z Axis calibration	16
6.3 Slider Axis Calibration	18


Packing List

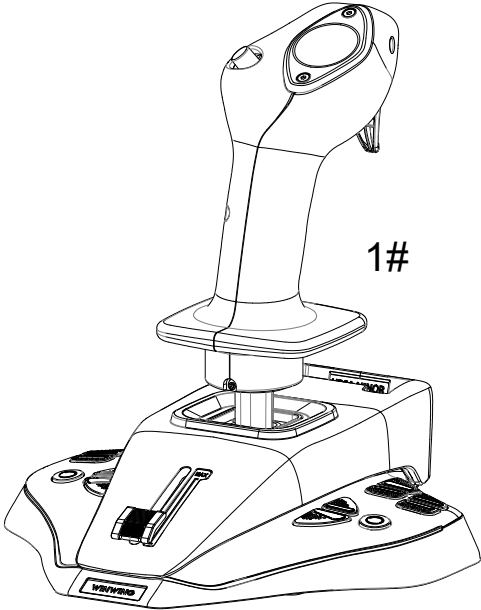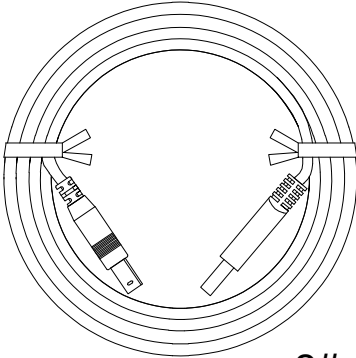① 	② 
③ T1  T2 	④ 3#  x2


①	J5-BASE-BLUE+JGRIP-C1-R (1#)	1
②	Data Cable (2#)	1
③	Tool Kit	1
	T1: T1:2.0mm Hex Allen	1
	T2: T2:2.5mm Hex Allen	1
④	Accessory Kit	1
	3#) M3*6 Hex Socket Head Cap Screw (3#)	2

1 Parameters


1.1 Performance Parameter

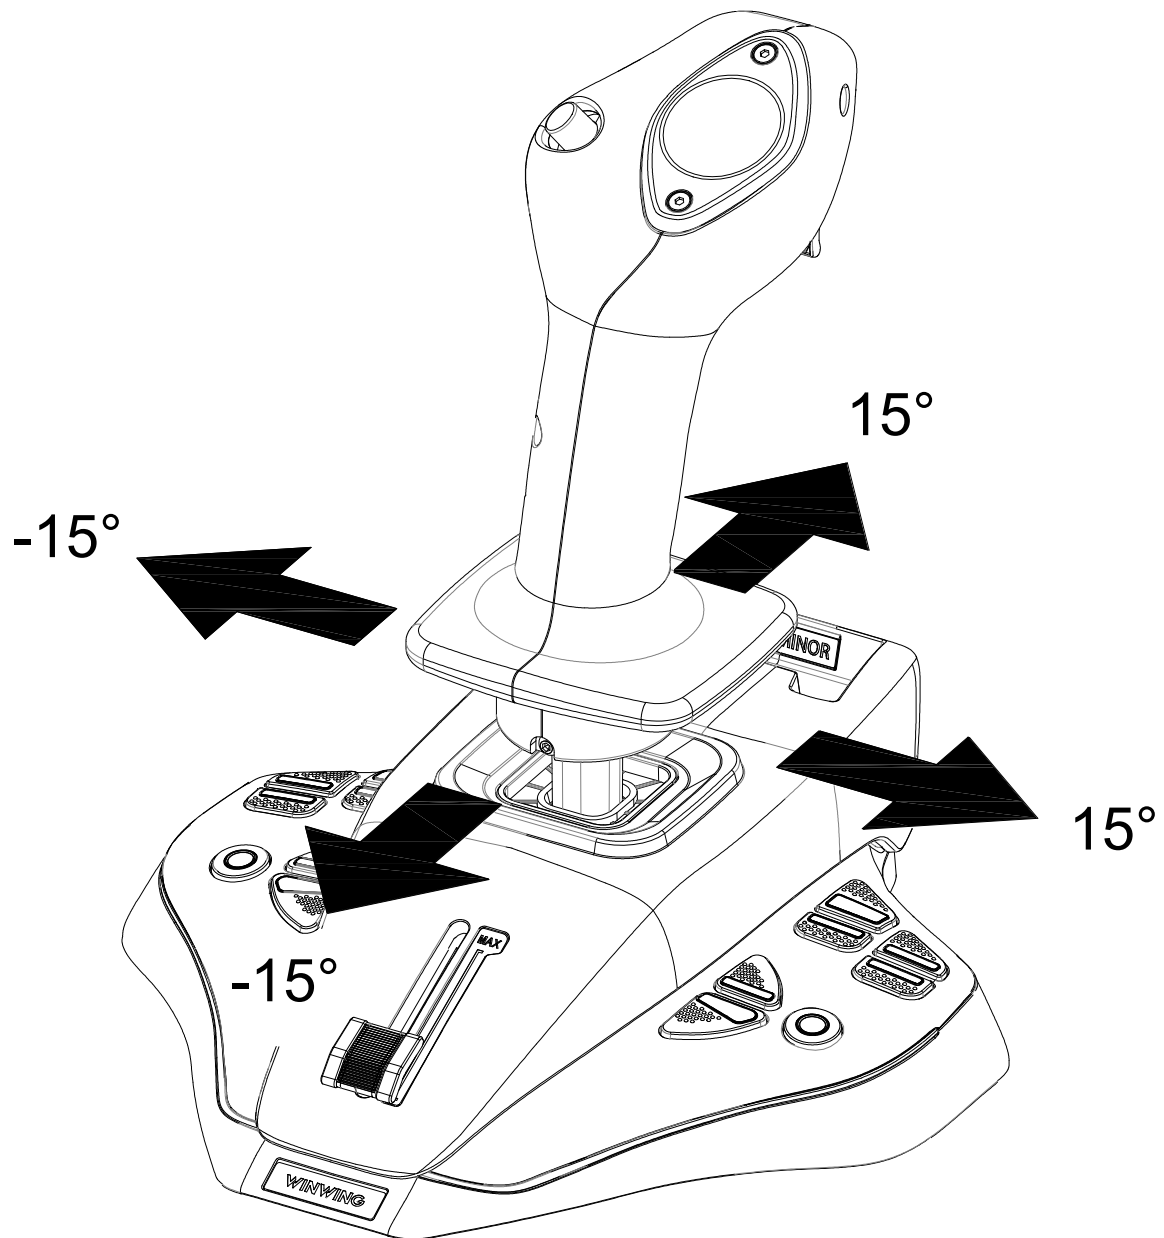

*X/Y Axis Movement Angle: $\pm 15^{\circ}$, Operating Force: $\sim 6\text{N}$

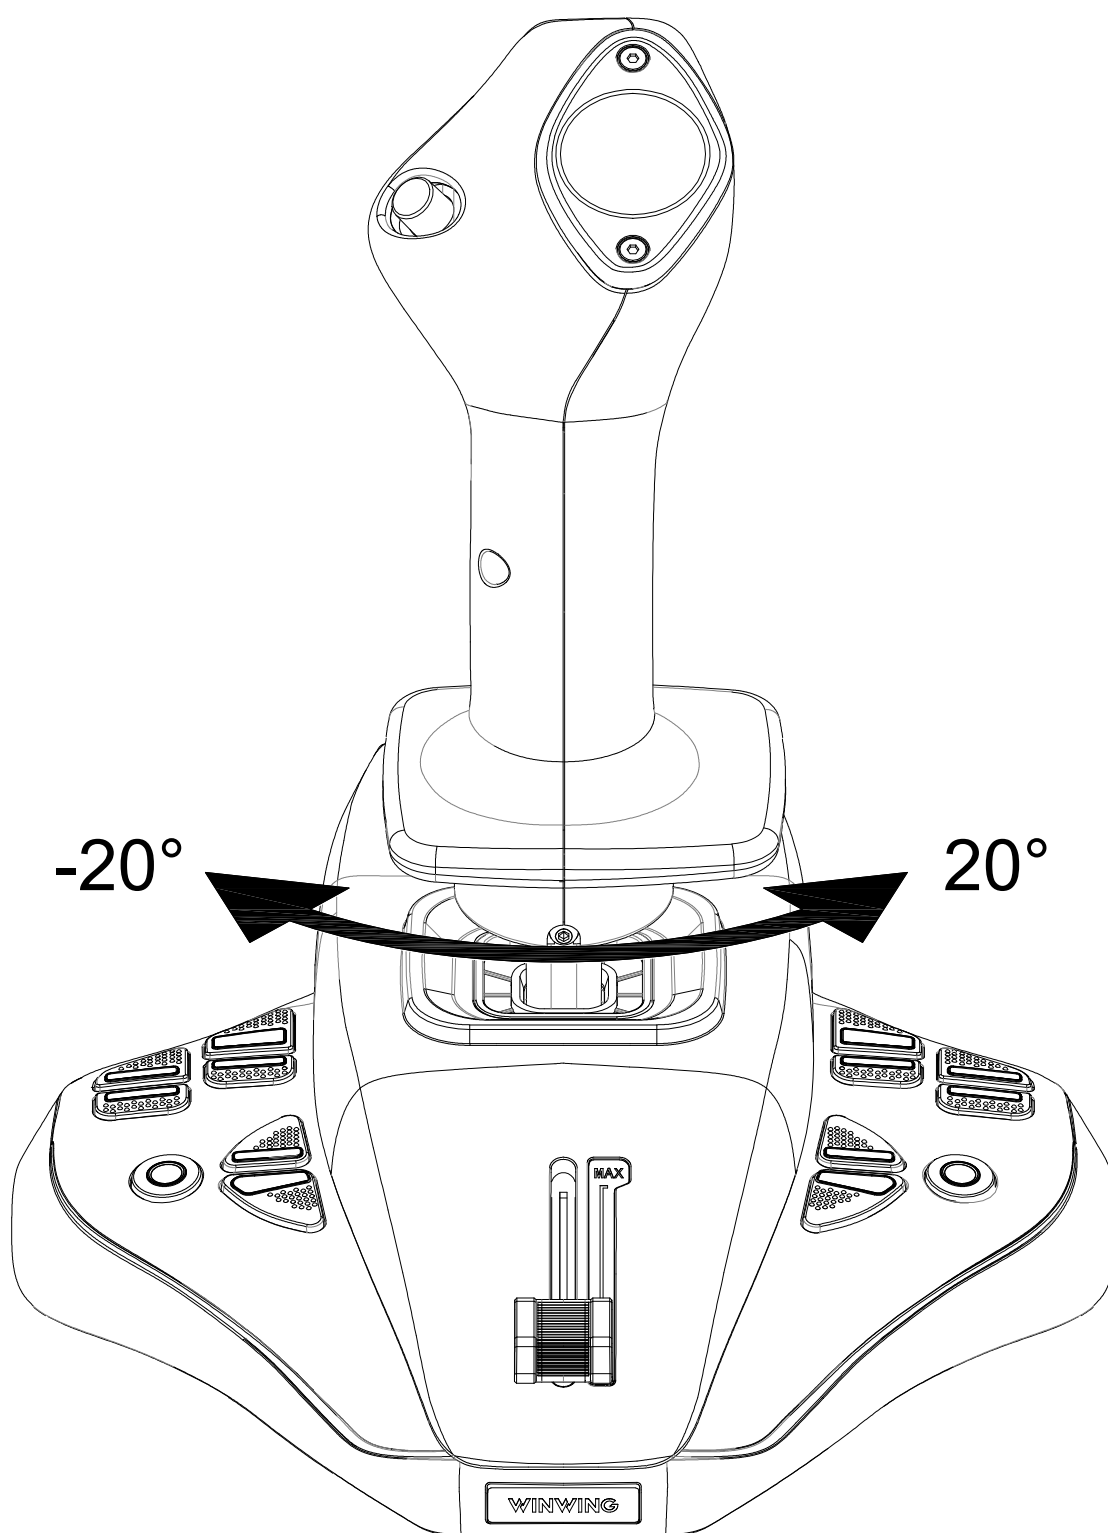

*Z Axis Rotation Angle: $\pm 20^\circ$, Rotation Torque: $\sim 4\text{kgf}\cdot\text{cm}$

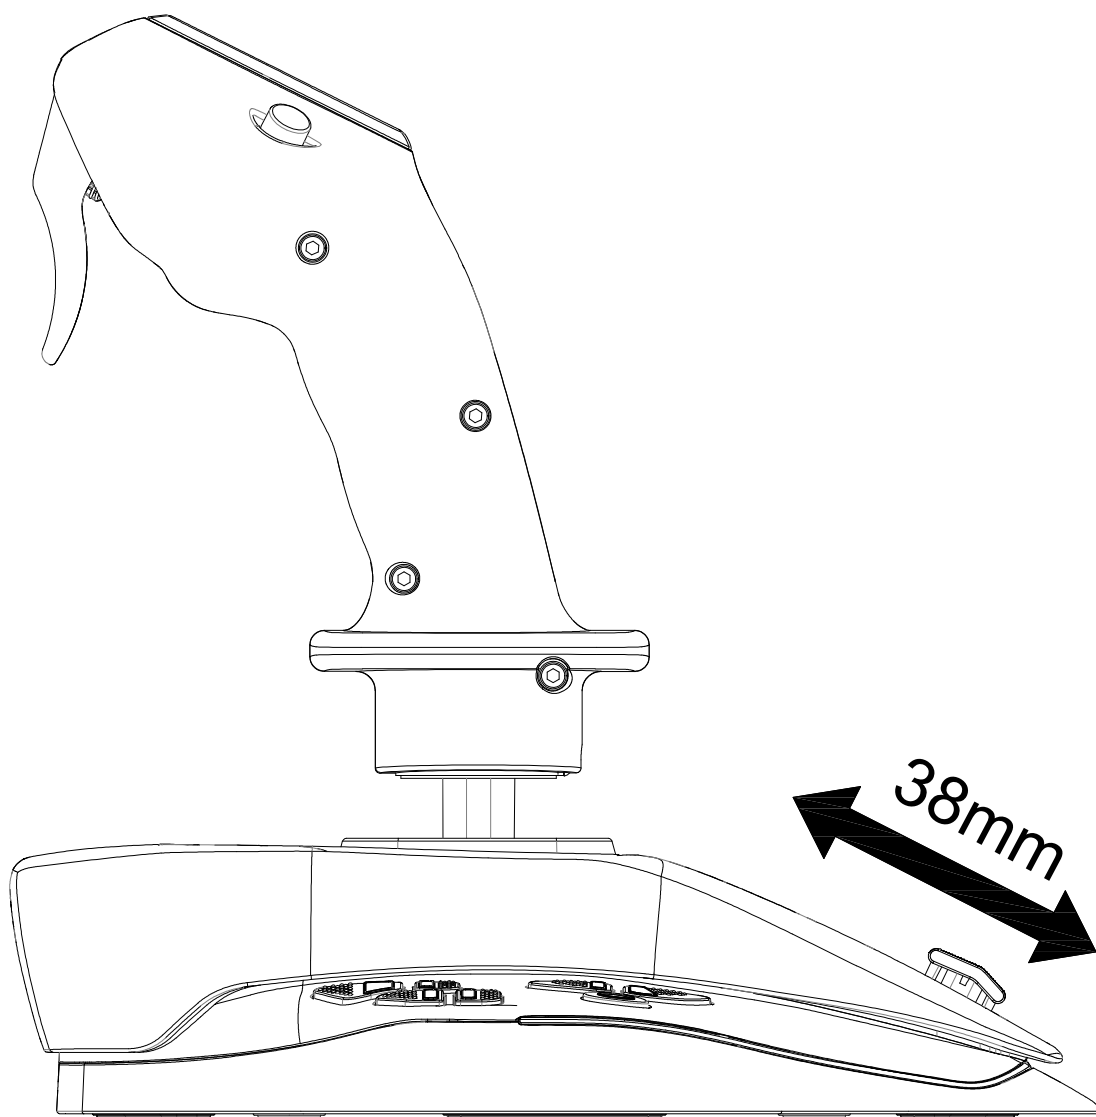

*Potentiometer Axis Available Physical Travel: 38mm, Operation Force: 35-135gf


1.2 Applicable Models

For independent use


1.3 Dimensions

L*W*H: 227mm*217mm*230mm

Weight: 0.98Kg=2.16lb

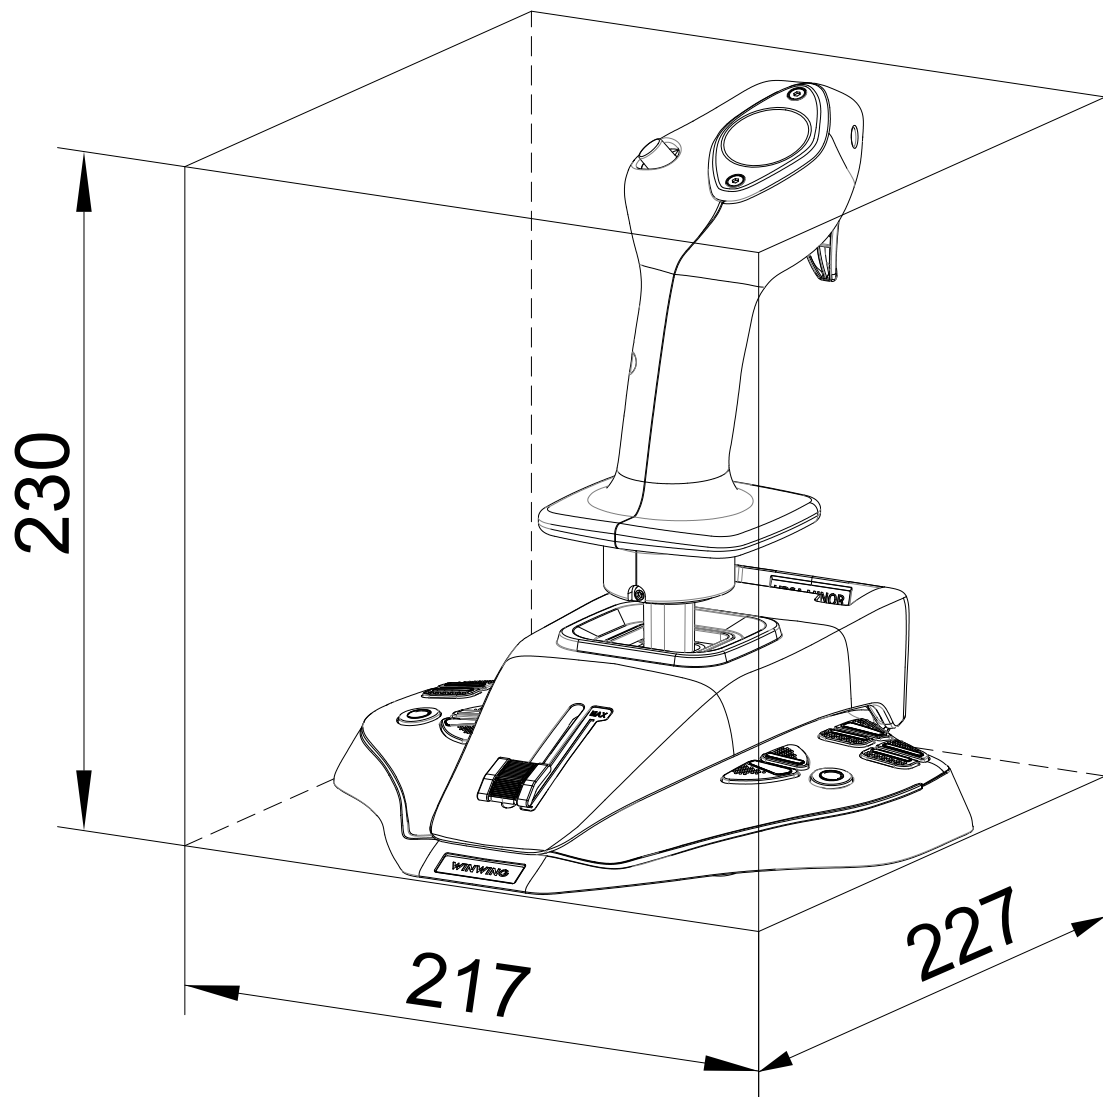

1.4 Installation Dimensions

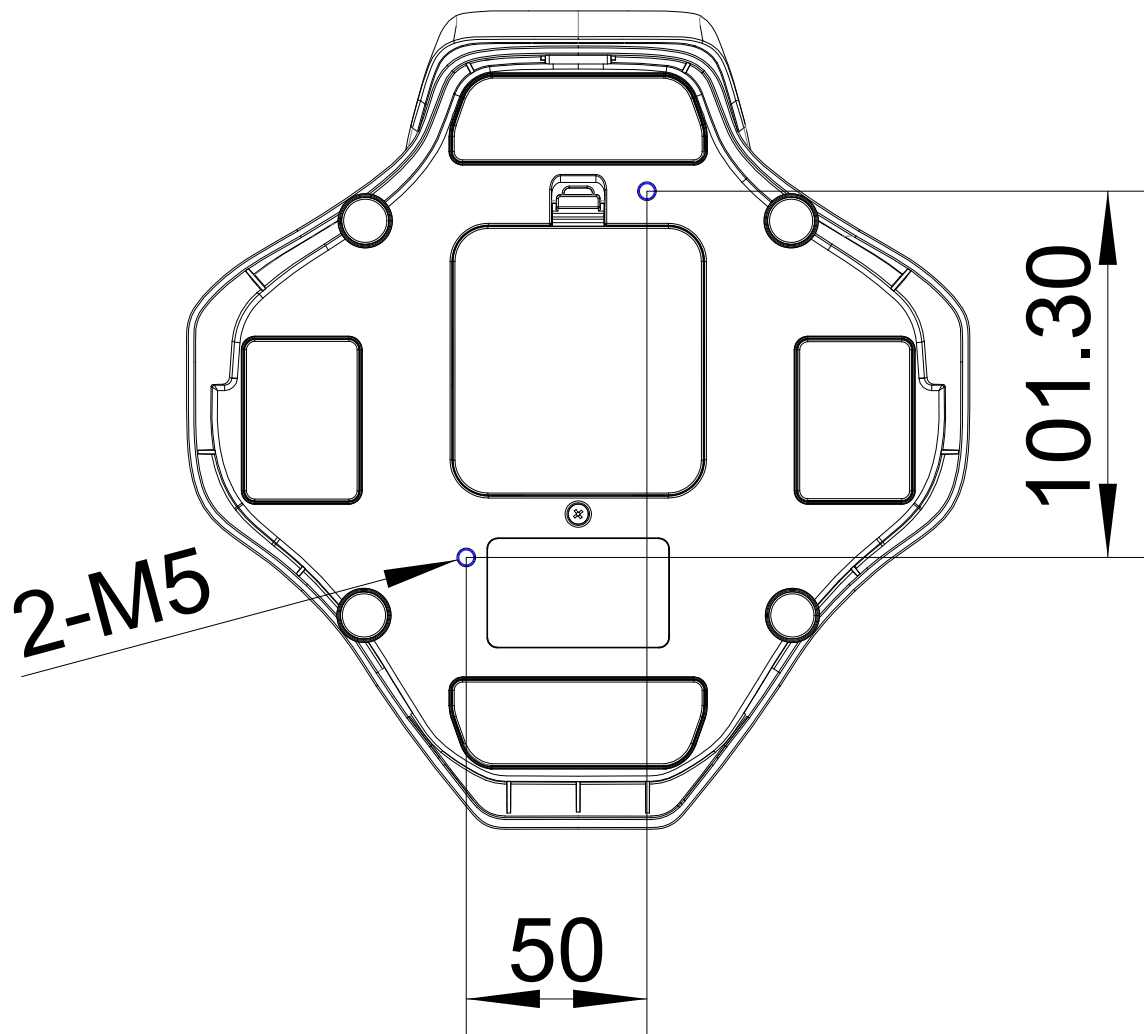


Note: The screw insertion depth must be greater than 6mm and less than 10mm. Screws must be self-prepared and are not included in the accessory kit.

* Unit: mm


2 Functions

2.1 Buttons and Functions

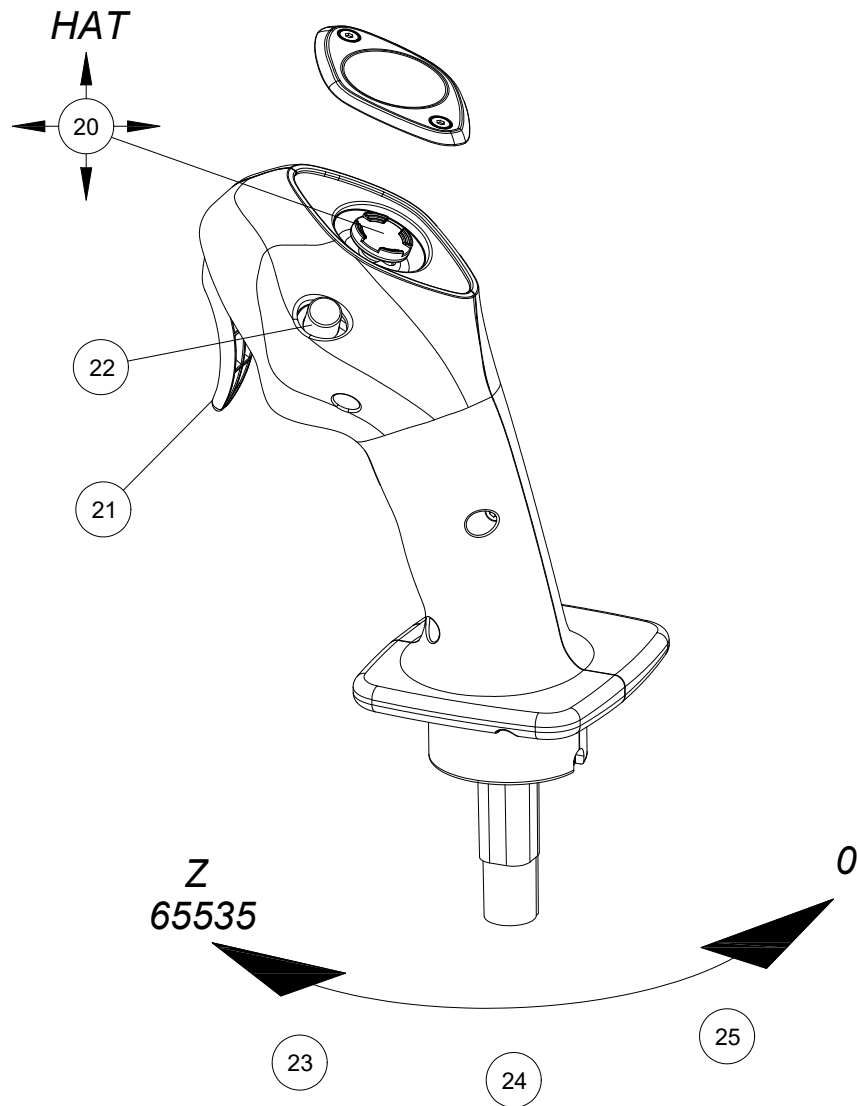


* The grip is equipped with vibration function, with adjustable vibration intensity levels from 0 to 255.

* Removing the magnetic cover reveals the hidden 5-way switch.

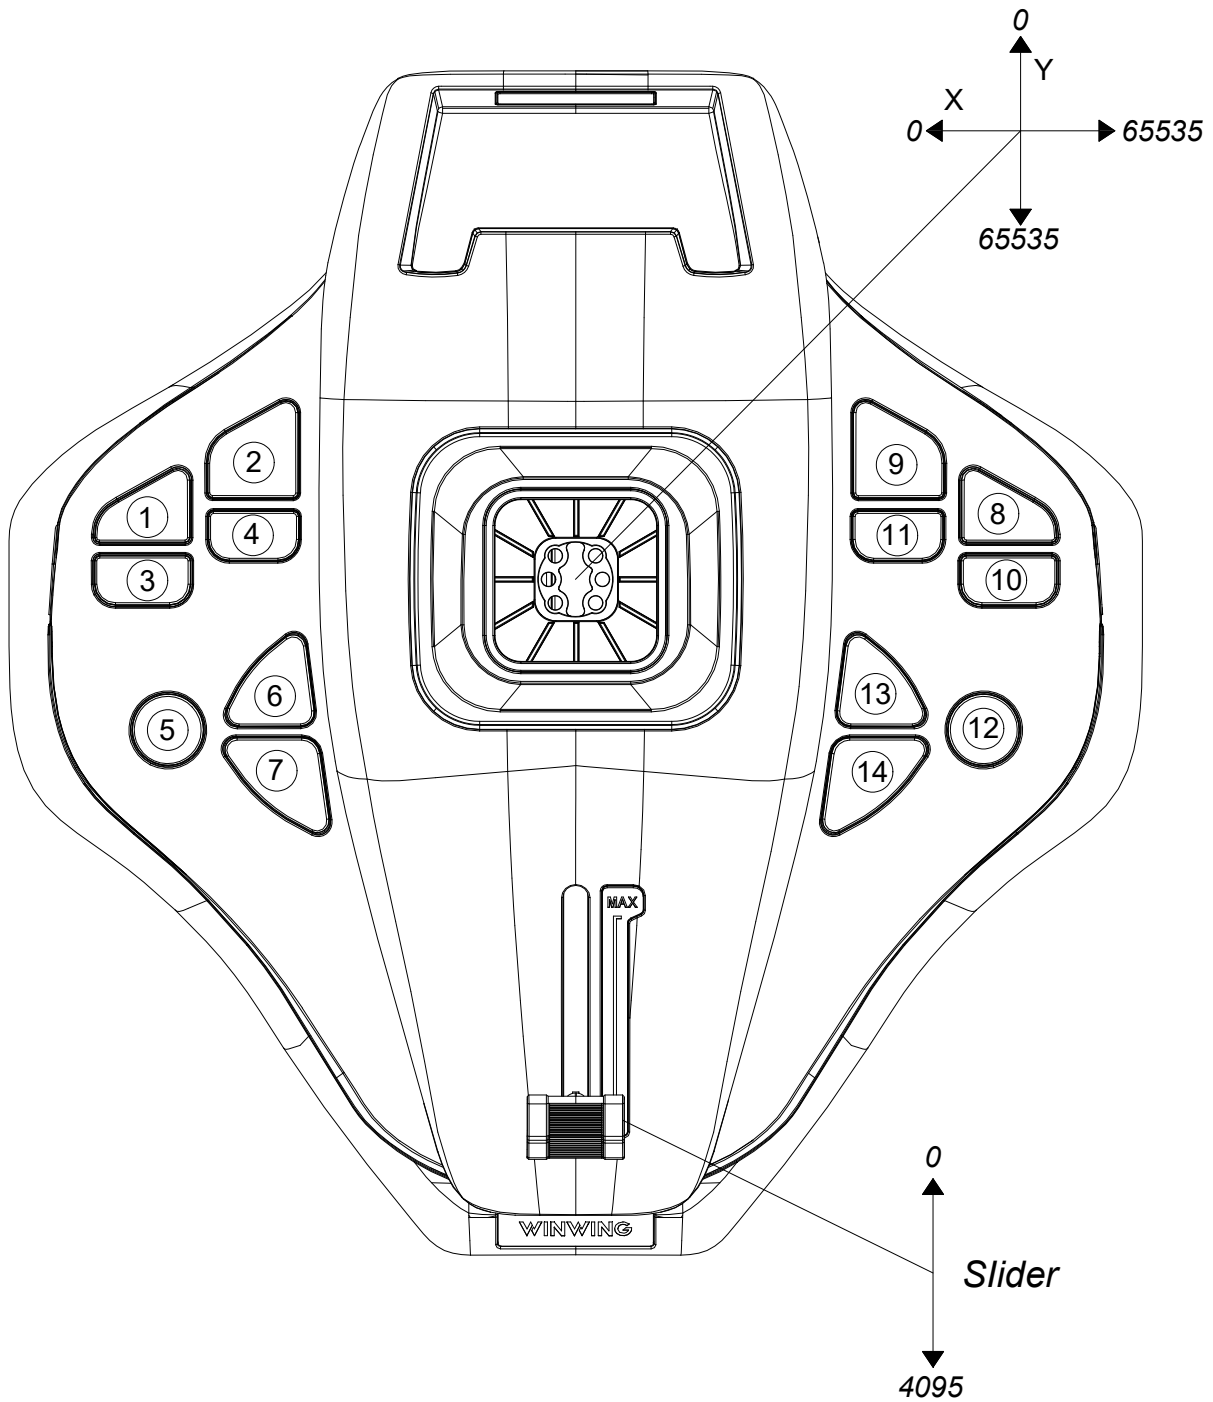

*14 Button Switches: Press Force of 250gf, Press Travel of 0.25mm.

Note: Please press the center area of the keycap. Pressing too close to the edge may cause the keycap to get stuck.

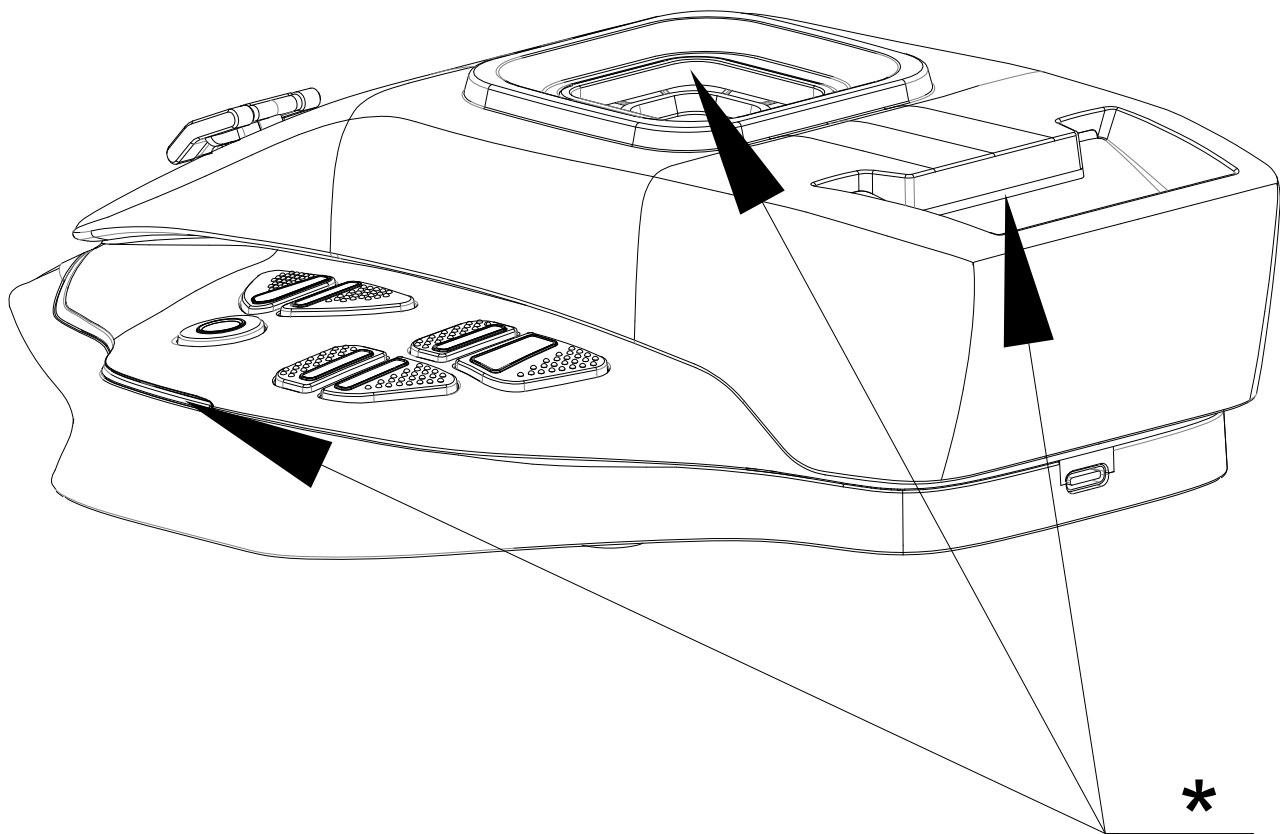


* Ambient Light: 1 cold white light path

① Logic in compatible status: In upgrade mode, it cycles on and off (on for 1 second, off for 1 second). In work mode, it flashes (on for 1 second, off for 1 second) 5 times after power on, then controlled by SimAppPro, and the status light goes out after the computer enters sleep mode.

② It can also be configured as a breathing light mode in SimAppPro, gradually brightening from dark to the brightest, then gradually dimming from the brightest to off, and it will continue to cycle in this way.


2.2 Adjustment Methods

Z Axis Locking:

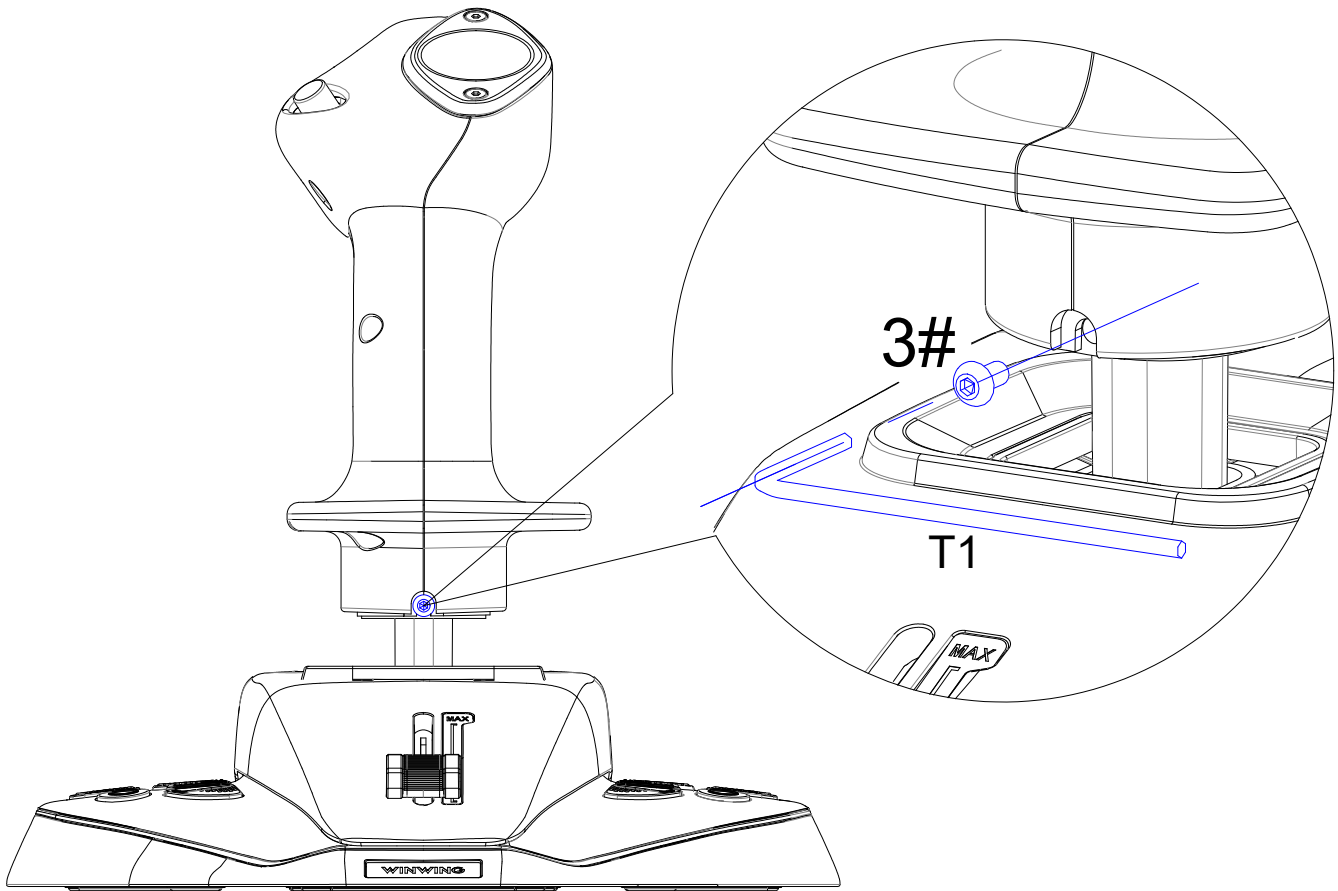


*Z-axis is adjustable: With a T1 (2.0mm) hex wrench, tighten the screw to lock the Z-axis, and remove the screw to achieve Z-axis rotation of $\pm 20^\circ$.

X/Y Axis Damping Adjustment:

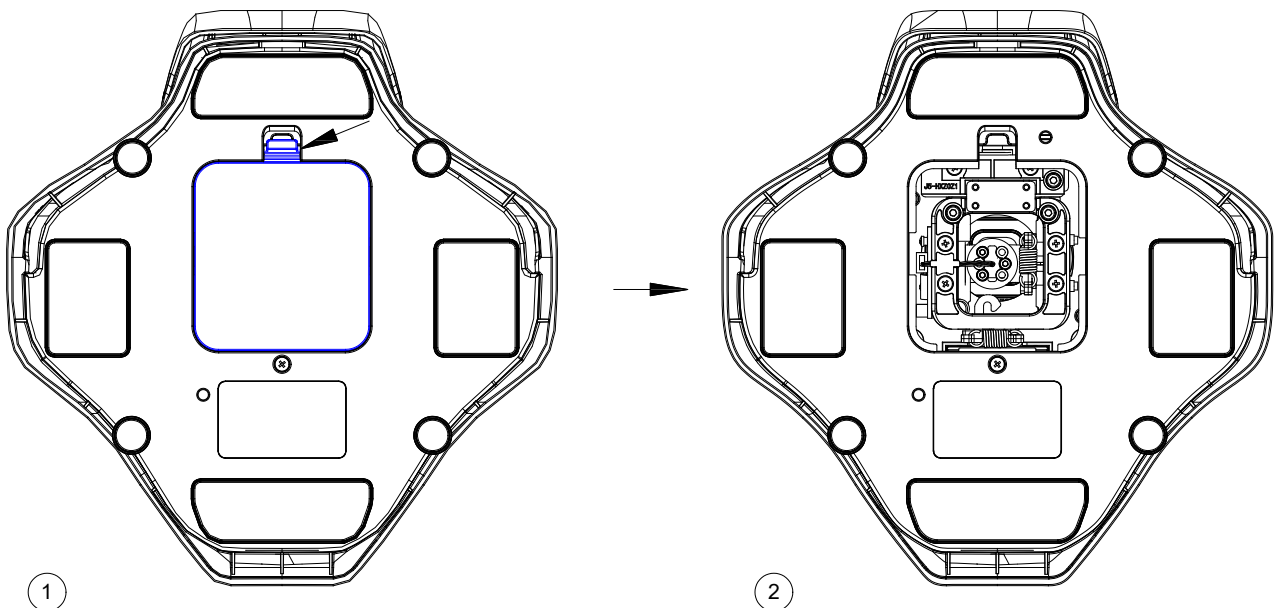

* Flip the product to the bottom side, unfasten the clips and remove the bottom cover.

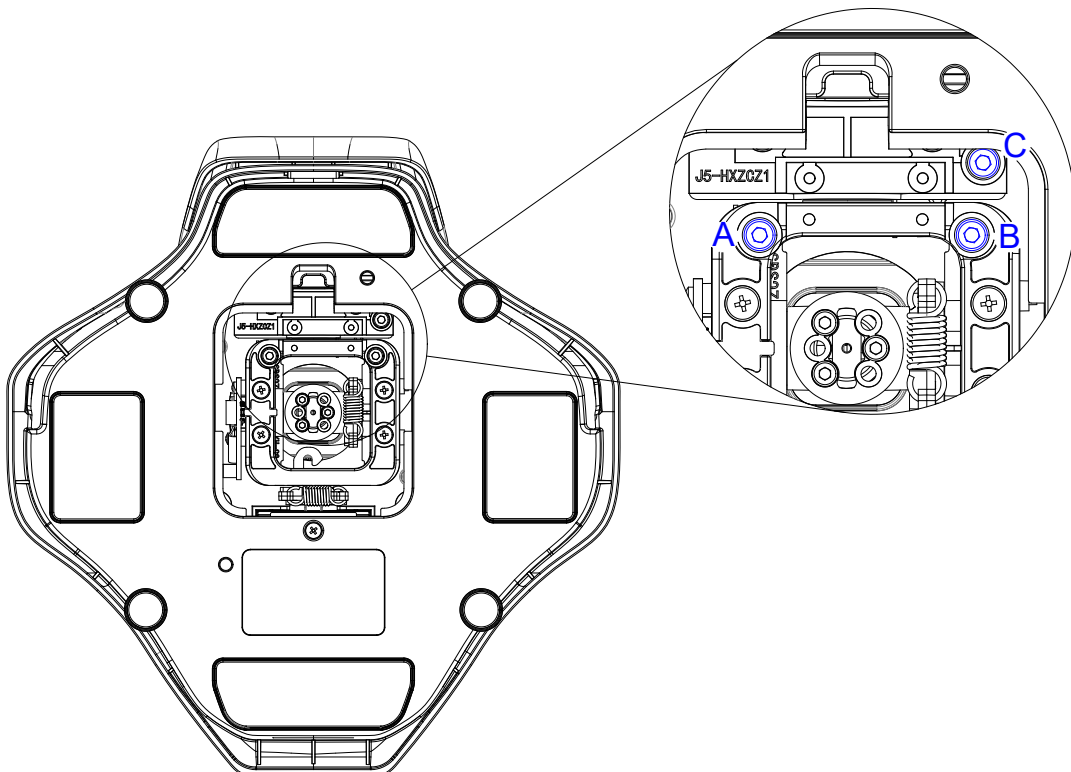

*As shown, use T2 (2.5mm) hex wrench: Adjust screws A and B simultaneously to adjust Y-axis damping (clockwise to increase, counterclockwise to decrease). Adjust screw C to adjust X-axis damping (clockwise to increase, counterclockwise to decrease).

Note: Do not fully unscrew to prevent screw drop.

3 Components Assembly and Disassembly


/

4 Installation of Connectors

/

5 Installation Methods

5.1 Desktop Mounting

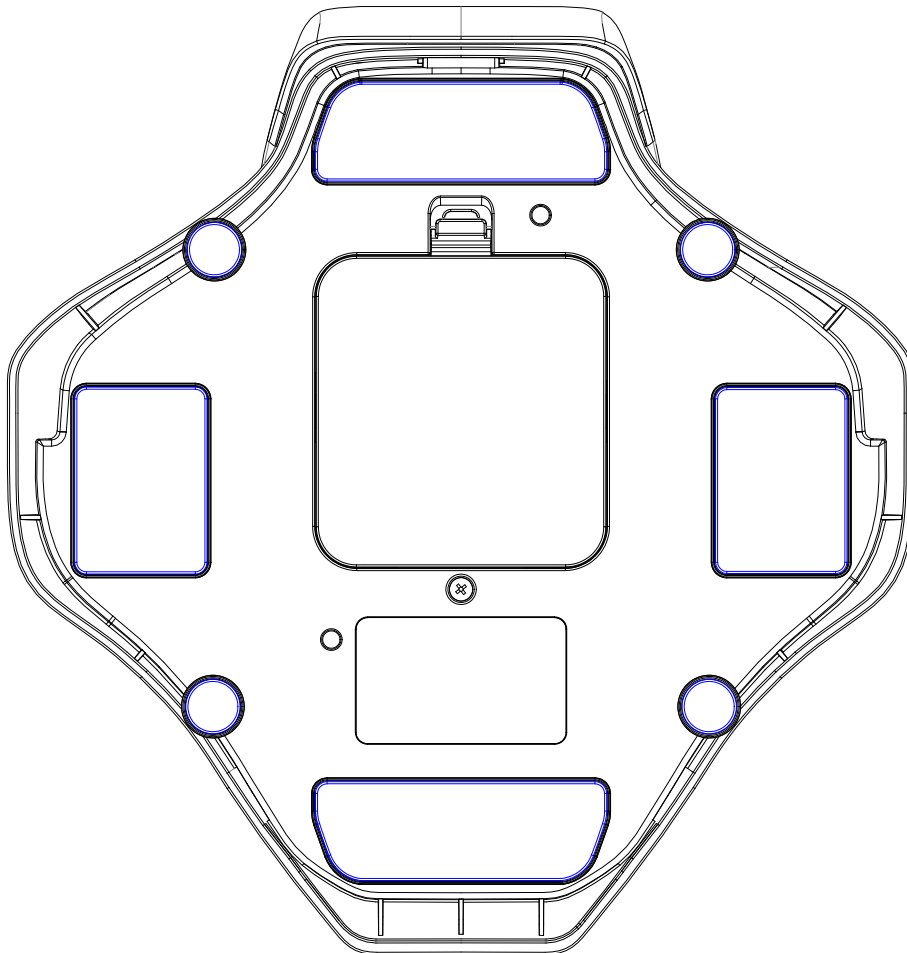

As shown, remove the protective film from the bottom silicone pad and place it directly on the desktop.

Note: Ensure the desktop is flat and clean. Glass and marble desktops provide better anti-slip effects.

Note: The shell of this product is made entirely of plastic, structured with 3 layers vertically stacked. After assembly and locking, due to the deformation and stacking of the plastic material, there may be a slight gap (gap MAX: 0.5mm) between the silicone foot pads at the bottom of the product and the placement surface. This does not affect usability.

5.2 Game Seat Mounting

* Use two M5 screws to fix the product to a flat surface with holes from the bottom.
Installation holes are shown in section 1.4 Installation Dimensions.

Note: Screw insertion depth should be greater than 6mm but less than 10mm. Screws must be self-prepared and are not included in the accessory kit.


5.3 Cascading

/


6 Calibration

6.1 X and Y Axes Joystick Calibration


①Open SimAppPro, click the device icon to enter the test page, then click the "Calibration" option;

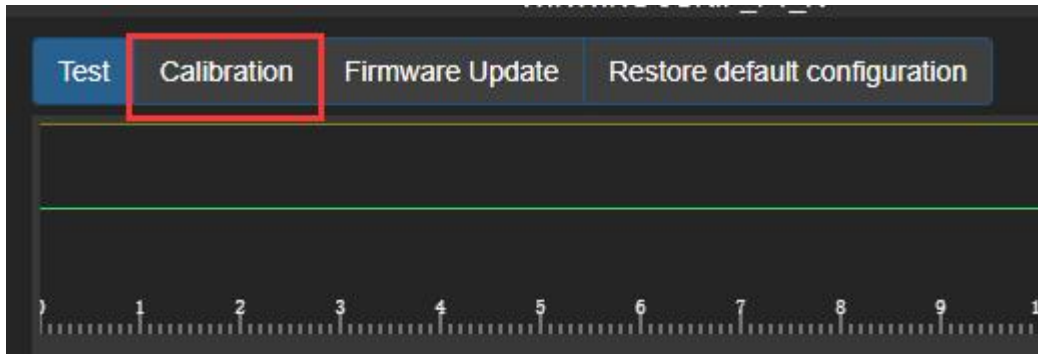

②On the calibration page, click the two buttons below to start calibration, then move the joystick through its full range;

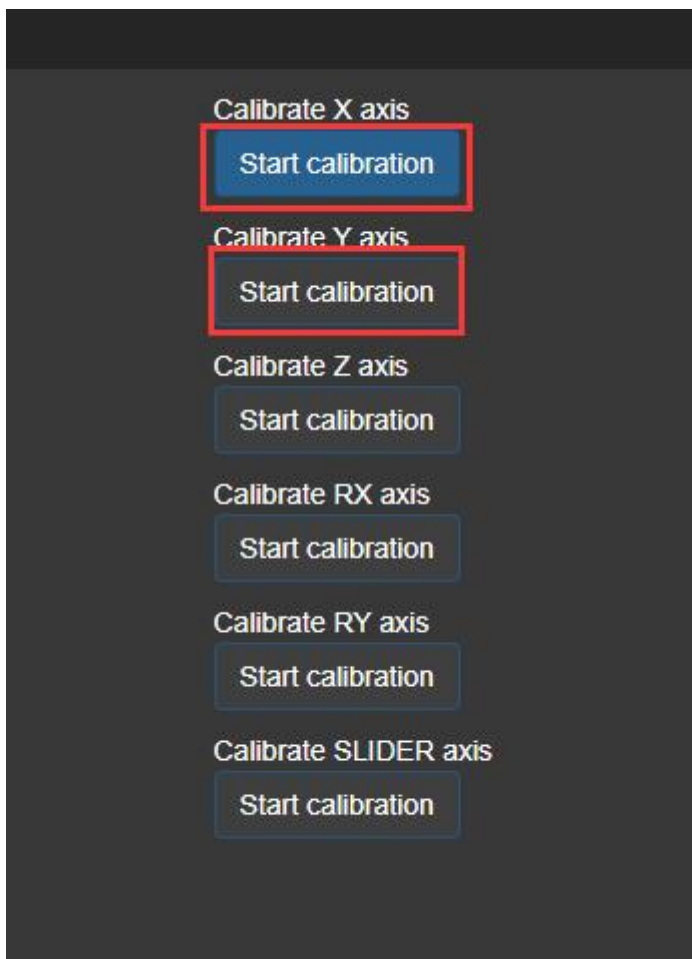


③After moving, let the joystick naturally return to the center, then click the two buttons below;

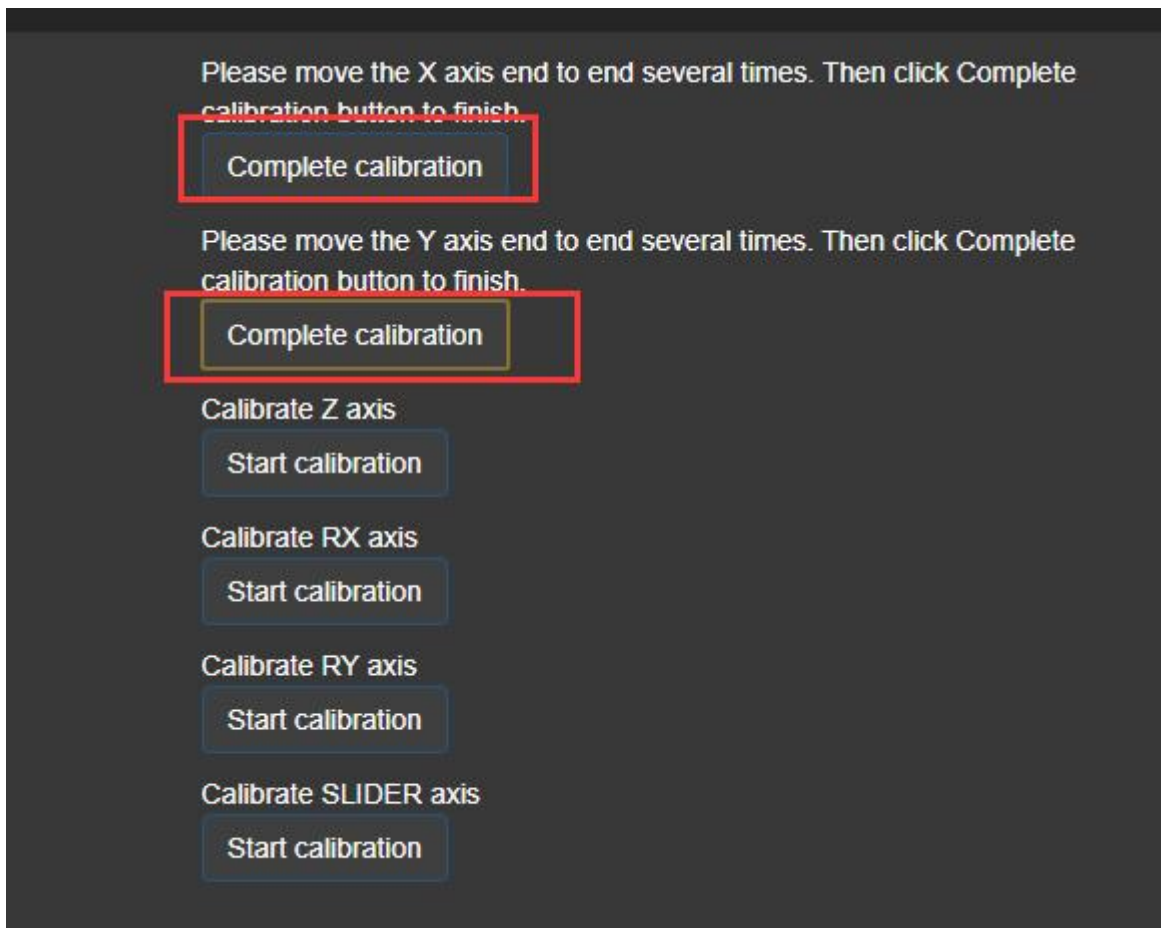

④At this point, the joystick calibration is complete. Return to the test page and observe if the data is normal. If there are abnormalities, please re-execute the calibration steps.


6.2 Z Axis calibration

①Open SimAppPro, click the device icon to enter the test page, then click the "Calibration" option;

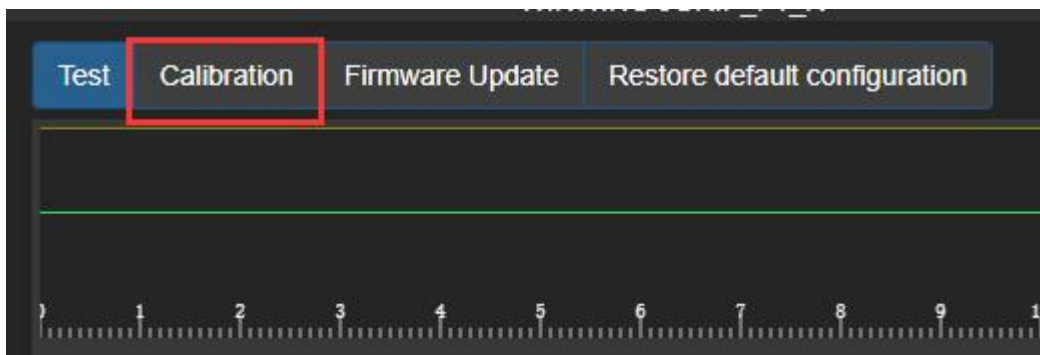


②

On the calibration page, click the button below to start calibration, then rotate the Z-axis through its full range;

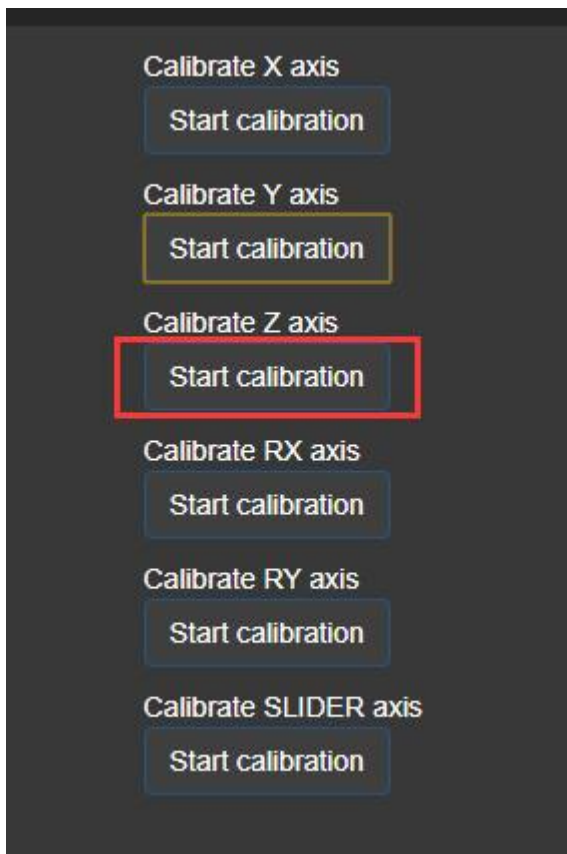


③After moving, let the Z-axis naturally return to center, then click the button below;

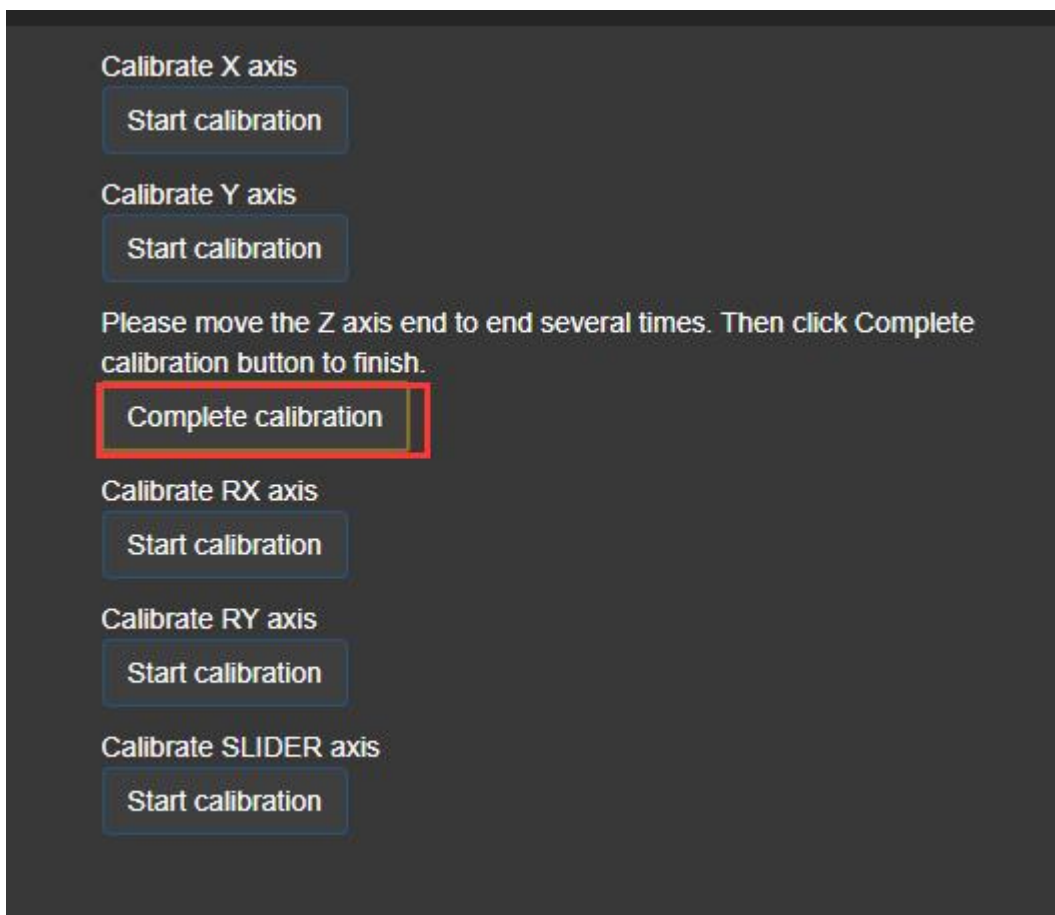


④At this point, the Z-axis calibration is complete. Return to the test page and observe if the data is normal. If there are abnormalities, please re-execute the calibration steps.

6.3 Slider Axis Calibration


①Open SimAppPro, click the device icon to enter the test page, and then click the “calibration” option;

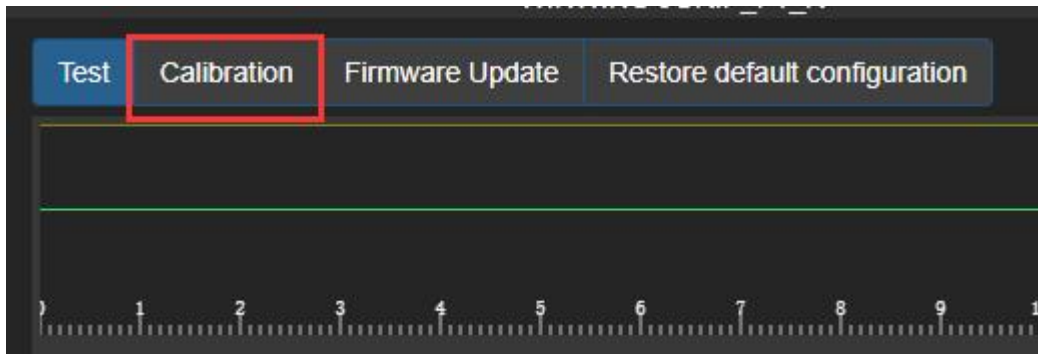

②On the calibration page, click the button below to start calibration, then move the slider axis through its full range;

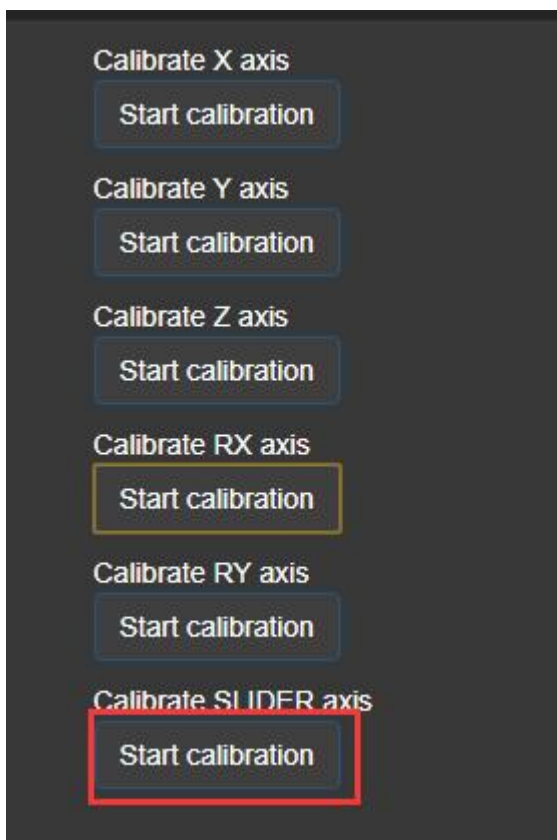

③After moving, click the button below;

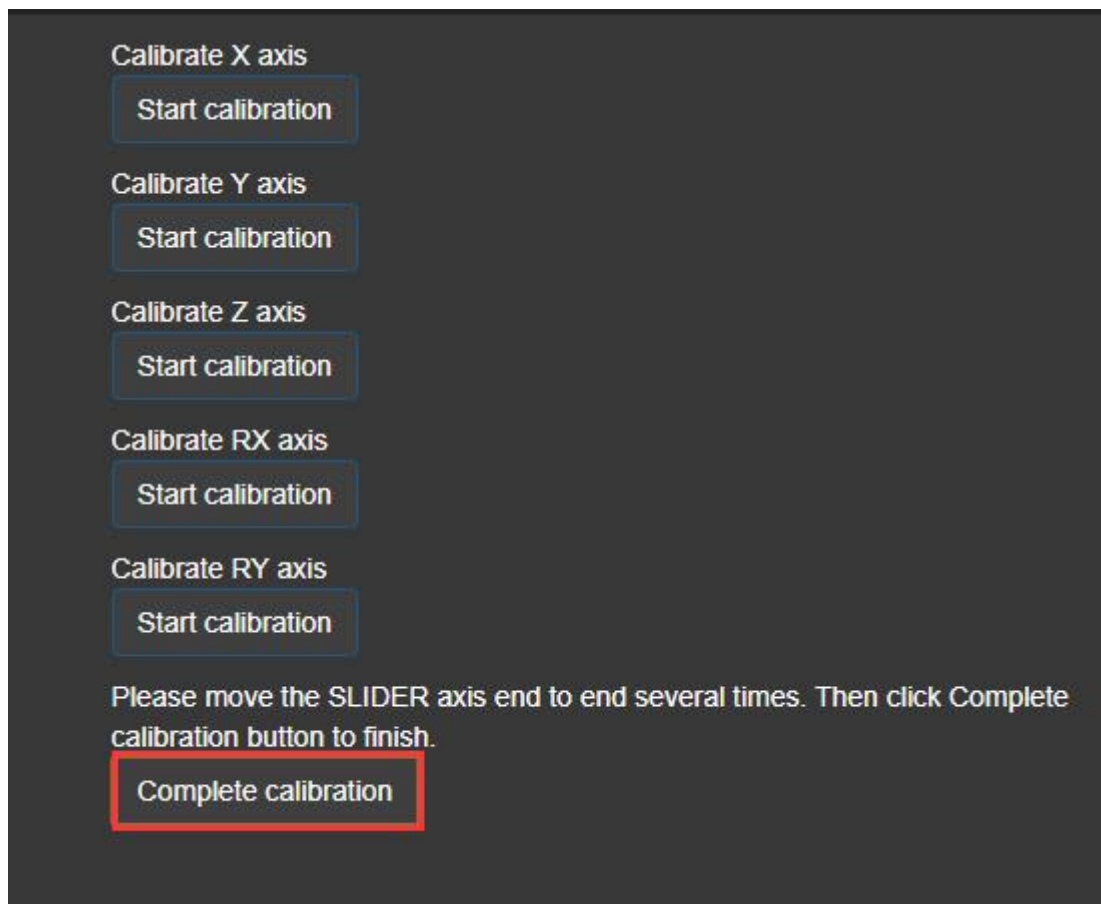

④ At this point, the slider axis calibration is complete. Return to the test page and observe if the data is normal. If there are abnormalities, please re-execute the calibration steps.

*内容如有更新，恕不另行通知。

*Contents are subject to updating without notice.

成都翼胜科技有限责任公司

WWW.WINWING.CN

INFO@WINWING.CN

成都市郫都区现代工业港长生桥路 1111 号 19 栋

High-tech International Enterprise Zone No.19 Building, Changshengqiao Road

1111#, Pidu District, Chengdu, Sichuan, China 610000